



MATTE BLACK



WIDE COMFORTABLE SEAT



110MM WIDER REAR TYRE



21 L LARGE UNDER-SEAT STORAGE

COLOUR VARIANTS

FASCINO S DISC



FASCINO DRUM & DISC



FASCINO DRUM



SPECIFICATIONS

ENGINE

Engine Type	Air Cooled, 4-Stroke, SOHC, 2-Valve
Hybrid	Equipped
Displacement	125 cc
Bore & Stroke	52.4 x 57.9 mm
Compression Ratio	10.2:1
Maximum Horsepower	6.0 kW (8.2PS) / 6500 r/min
Maximum Torque (With Assist Function Working)	10.3 Nm (1.1 kgf.m) / 5000 r/min
Stop Start System (SSS)	Equipped
Smart Motor Generator (SMG) System	Equipped
Fuel System	Fuel Injection
Starting System Type	Electric Starter and Kick Starter
Transmission Type	V-Belt Automatic

DIMENSIONS

Overall Length x Width x Height	1,920 mm x 685 mm x 1,150 mm
Seat Height	780 mm
Wheelbase	1280 mm
Minimum Ground Clearance	145 mm
Kerb Weight (With Oil & Full Fuel Tank)	99 kg
Fuel Tank Capacity	5.2 l
Underseat Storage	21 l

CHASSIS

Suspension Type (Front / Rear)	Telescopic Fork / Unit Swing
Tyre Size (Front)	90/90-12 - Tubeless
Tyre Size (Rear)	110/90-10 - Tubeless
Front Fender	Metal
UBS	Equipped
Brake Type (Front)	Disc (190 mm) / Drum (130 mm)
Brake Type (Rear)	Drum

ELECTRICAL

Battery	Maintenance Free - 12V, 5.0 Ah
Ignition System	TCI (Transistor Controlled Ignition)
Headlight (Class C)	Disc: LED Drum: Halogen 12V, 35 / 35 W x 1
Brake light / Tail light	Disc: LED Drum: 12V, 21 / 5 W x 1
DRL (Daytime Running Light)	LED (Only Disc Variant)
Sidestand Engine Cut-off Switch	Equipped
Meter Console	Disc: Digital / Drum: Analogue
Bluetooth (Y-Connect)	Equipped (Only Disc Variant)
Answer Back	Equipped*

*Available in select variants. T&C Apply.



The specifications and designs of the motorcycles shown here may vary according to the requirements and are subject to change without prior notice. Colors shown may not match the actual color due to printing limitations. *Conditions apply. **Warranty extended for engine, FI system, AIS system and Electricals including wiring harness, whichever is earlier. 5-Year warranty* only applicable in case of purchase of Yamaha Protection Plus Policy during validity period. Please refer to Yamaha Protection Plus Policy for more details.
 Yamaha Motor India Sales Pvt. Ltd., AKDR Tower-5th Floor, Door No. 3/381, Rajiv Gandhi Salai (OMR) Mettukkuppam, Chennai - 600097.
 Phone: 044-3814 7000. Toll Free No.: 1800 420 1600 Email: info@yamaha-motor-india.com www.yamaha-motor-india.com

Authorised Dealer



The call of the **BLUE**

ACE YOUR STYLE
 WITH **NEW MATTE RED**

fascino 125Fi HYBRID



*Available on select variants. T&C Apply.



Equipped with **Answer Back**

The **Answer Back** functionality of Fascino S seamlessly integrates convenience and advanced technology, offering additional comfort to the riders.

With flashing blinkers and buzzer of the horn, it's easy to identify your Fascino S in crowded areas with just a click on answer back button of the app.



Equipped with
Answer Back



DARK MATTE BLUE

ACE YOUR RIDE WITH **HYBRID POWER**



EFFICIENT AND POWERFUL 125CC FI ENGINE

"Blue Core" Engine's fuel delivery from the precision programmed FI System achieves outstanding performance & eco-friendliness.

ENGINE ADVANCEMENTS BASED ON "BLUE CORE" IDEALS

Increasing combustion efficiency

Compression ratio of 10.2:1, combustion chamber and intake duct (tumble flow), fuel injection system.

Ensuring excellent cooling efficiency

DiASil Cylinder body and high-efficiency cooling fan.

Reducing power loss


Lightweight aluminium piston, offset cylinder, optimized drivetrain settings, Smart Motor Generator System.

ECONOMICAL & ECOLOGICAL PERFORMANCE

SMART MOTOR GENERATOR

SILENT START

SMG is attached to crankshaft with no gears. Enables quieter start & eliminates sound of meshing gears.

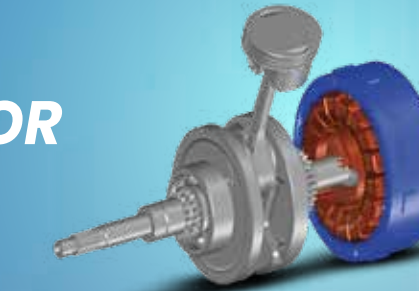


AUTOMATIC STOP & START SYSTEM

This feature automatically stops the engine when the vehicle is at stop and idling, thereby improving fuel economy by upto 4%.

HYBRID POWER ASSIST

Instantaneous power assist when starting out from stop while riding uphill pumps torque from 9.8m to 10.3m. Sleek 99kg results in agile handling & push of ease.

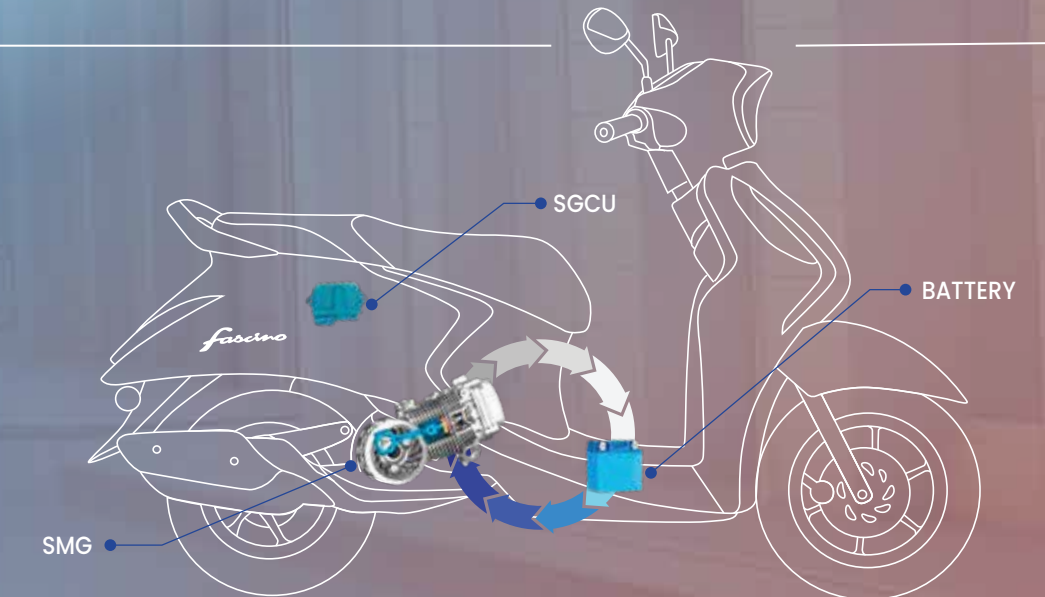

Y-CONNECT APP

Now you can stay connected even on the move. The Yamaha Y-Connect App displays phone notifications on your instrument cluster screen.