

FUNCTIONAL FEATURES



LED Flashers*
(*Standard on R15M)



Dual Channel ABS



Super Wide 140 mm Radial Rear Tyre



Upside Down Front Forks

DESIGN FEATURES



Special Seat*



Grey Colour Muffer Guard*



Grey Colour Aluminium Swingarm*

*Available only on R15M

COLOUR VARIANTS

RACING BLUE **NEW**



METALLIC RED **NEW**



VIVID MAGENTA METALLIC **NEW**



INTENSITY WHITE



R15M METALLIC GREY



DARK KNIGHT



Authorised Dealer

SPECIFICATIONS

Engine

Engine type	Liquid cooled, 4-stroke, SOHC, 4-valve
Displacement	155 cc
Bore x stroke	58.0 x 58.7 mm
Compression ratio	11.6:1
Maximum horse power	13.5 kW(18.4PS)/10000 r/min
Maximum torque	14.2 N·m(1.4kgf·m)/7500 r/min
Fuel system	Fuel injection
Clutch type	Wet, multiple-disc
E20 compatible	Yes
Starting system type	Electric starter
Transmission type	Constant mesh, 6-speed

Chassis

Frame type	Deltabox
Front suspension system	Telescopic Upside Down Fork (USD Fork)
Rear suspension system	Linked-Type monocross suspension
Brake type (front)	Disc brake (282 mm)
Brake type (rear)	Disc brake (220 mm)
Tyre size (front)	100/80-17M/C 52P - Tubeless
Tyre size (rear)	140/70R17M/C 66H - Radial tubeless
Inner tube diameter of front fork	37.0 mm
ABS	Dual channel

Dimensions

Overall length	1990 mm
Overall width	725 mm
Overall height	1135 mm
Seat height	815 mm
Wheelbase	1325 mm
Minimum ground clearance	170 mm
Kerb weight (with oil and a full fuel tank)	141 kg
Fuel tank capacity	11 l

Other Information

Battery	12 V, 4 Ah	Clock	Digital, auto adjust with smartphone connectivity
Headlight	Bi-functional LED (Class D)	Riding Modes	Track mode / Street mode
Position light	LED	Dual horn	Equipped
Brake/tail light	LED	Y-Connect (Smartphone Bluetooth Connectivity)	Equipped
Speedometer	Digital	Side stand engine cut-off switch	Equipped
Tachometer	Digital	Traction control system	Equipped
Fuel meter	Digital	Quick shifter (up-shift)	Equipped
Shift timing light	Equipped	Colour TFT Meter	Equipped
VVA indicator	Equipped		
Quick shifter indicator	Equipped		
Fuel consumption indicator	Equipped		
Gear position indicator	Equipped		

The specifications and designs of the motorcycles shown here may vary according to the requirements and are subject to change without prior notice. Colors shown may not match the actual colour due to printing limitations.*Conditions apply. **Warranty extended for engine, FI system, AIS system and Electricals including wiring harness, whichever is earlier. 5-Year warranty* only applicable in case of purchase of Yamaha Protection Plus Policy during validity period. Please refer to Yamaha Protection Plus Policy for more details.

Yamaha Motor India Sales Pvt. Ltd., AKDR Tower-5th Floor, Door No. 3/381, Rajiv Gandhi Salai (OMR) Mettukuppam, Chennai - 600097. Phone: 044-3814 7000. Toll Free No.: 1800 420 1600 Email: info@yamaha-motor-india.com www.yamaha-motor-india.com



The call of the BLUE

R15
VERSION 4.0

WE RACING
PERFECTION




R15M
ABS
DUAL CHANNEL

WE RACING
PERFECTION

FI ENGINE

155cc LC4V SOHC

The liquid cooled single overhead camshaft fuel injected engine churns out a maximum horse power of 13.6kW(18.4PS)/10000r/min and maximum torque of 14.2N·m(1.4kgf·m)/7500r/min.

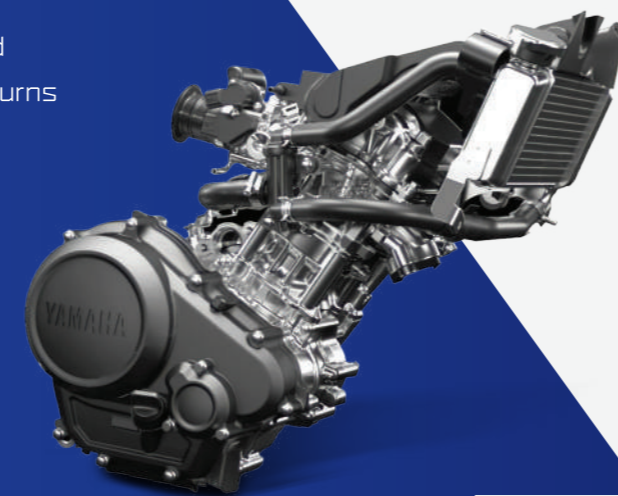


ASC

ASSIST &
SLIPPER CLUTCH

QUICK
SHIFTER

(UP-SHIFT)

TRACTION
CONTROL
SYSTEM

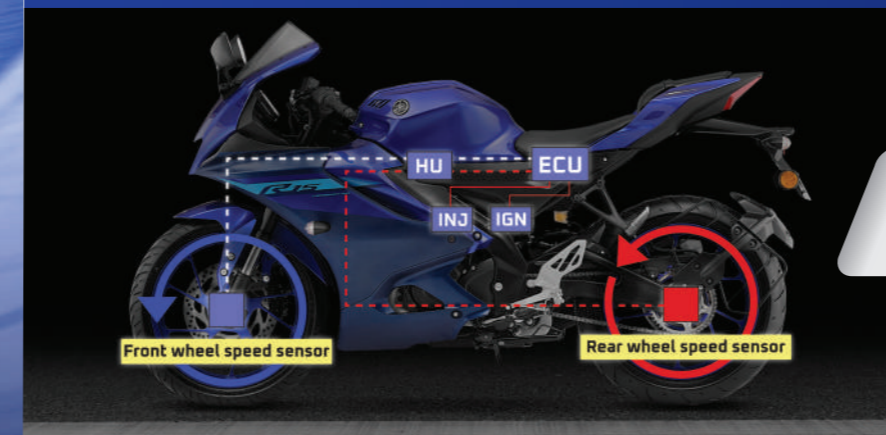

The R15M & R15 V4.0 comes with a Traction Control System. This is a dedicated electronic system that has the remarkable ability of reducing the chances of a wheelspin (slippage due to loss of traction).

VVA
VARIABLE VALVE ACTUATION



Colour
TFT METER

R15M
CONSOLE

Now the R15M has a full colour TFT meter inspired by the R1. Stay informed of all that happens with the advanced instrument cluster screen.

WITH
TRACK MODE &
STREET MODE

SMS & EMAIL

CALL ALERT

APP CONNECTIVITY STATUS

PHONE BATTERY
LEVEL STATUS

TRACK MODE

Latest Lap Time
Fastest Lap Time

STREET MODE

Average Mileage
Average Speed
Coolant Temperature
Battery Power

QUICK SHIFTER INDICATOR
(Common to both Track & Street Mode)

TRACTION CONTROL SYSTEM INDICATOR



WITH CONNECT

Stay connected even on the move. Y-Connect is Yamaha's latest innovation that lets you link your smartphone directly to your Yamaha motorcycle.